



# Samsung Galaxy S4 Display Assembly with Frame Replacement - Video Tutorial

Samsung Galaxy S4 Display Assembly with Frame Replacement

Written By: ZFix



## INTRODUCTION

i9500, i9505, i9506, i337, M919, I545, L720, R970

This procedure is similar for all of these models, but the Display Assembly with Frame is not compatible. You must select the spare part by the model!!!

This video will help you, if you want to replace the front or rear / main camera, loudspeaker, earpiece, charging port dock board as well.

[video: <https://www.youtube.com/watch?v=ra0p-zJ8v-Q>]



### TOOLS:

- [iFixit Opening Tools](#) (1)
- [Spudger](#) (1)
- [Tweezers](#) (1)
- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Picks set of 6](#) (1)



### PARTS:

- [Galaxy S4 LCD Screen and Digitizer \(ATT/T-Mobile\)](#) (1)
- [Galaxy S4 LCD Screen and Digitizer \(Sprint/Verizon\)](#) (1)
- [Samsung Galaxy S IV S4 LTE Display Assembly I9505 \(LCD, Digitizer/Front Panel\)](#) (1)
- [Samsung Galaxy S IV S4 LTE2 Display Assembly I9506 \(LCD, Digitizer/Front Panel\)](#) (1)

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-24 04:28:44 AM.